#### **INSTRUCTION MANUAL**

HI 96708

## **Nitrite High Range ISM**

Thank you for choosing a Hanna product. This manual will provide you with the necessary information for the correct use of the instrument. Please read it carefully before using the meter. If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com.

#### **Preliminary examination:**

Please examine this product carefully. Make sure that the instrument is not damaged. If any damage occured during shipment, please notify vour Dealer.

Each **HI 96708** Ion Selective Meter is supplied complete with:

- Two Sample Cuvettes and Caps
- 9V Battery
- Instruction Manual

Note: save all packing material until you are sure that the instrument works correctly. Any defective item must be returned in its original nackina.




 $m{i}$  For more details about spare parts and accessories see "Accessories"

Range	0 to 150 mg/L
Resolution	1 mg/L
Accuracy	$\pm 4$ mg/L $\pm 4\%$ of reading @ 25°C
Typical EMC Dev.	$\pm 1$ mg/L
Light Source	Tungsten lamp
Light Detector	Silicon Photocell with narrow band interference filter @ 575 nm
Method	Adaptation of the Ferrous Sulfate method. The reaction between nitrite and the reagent causes a greenish-brown tint in the sample.
Environment	0 to 50°C (32 to 122°F); max 95% RH non-condensing
Battery Type	1 x 9 volt
Auto-Shut off	After 10' of non-use in measurement mode; after 1 hour of non-use in calibration mode; with last reading reminder.
Dimensions	192 x 102 x 67 mm (7.6 x 4 x 2.6")
Weight	290 g (10 oz.).


## **HANNA** instruments www.hannainst.com

## Functional description:

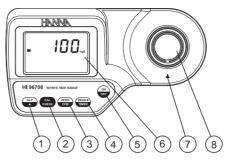

- 1. GLPA kev: press to enter GLP mode. In calibration mode press to edit the date and time
- 2. CAL CHECK key: press to perform the validation of the meter, or press and hold for three seconds to enter calibration mode.
- 3. **ZERO/CFM** kev: press to zero the meter prior to measurement, to confirm edited values or to confirm factory calibration restore.
- 4. **READ/**▶/**TIMER** kev: In *measurement mode*, press to make a measurement, or press and hold for three seconds to start a preprogrammed countdown prior to measurement. In GLP mode press to view the next screen.
- 5. **ON/OFF** key: to turn the meter on and off.
- 6. Liquid Crystal Display (LCD)
- 7. Cuvette alianment indicator
- 8. Cuvette holder

#### DISPLAY ELEMENTS DESCRIPTION:

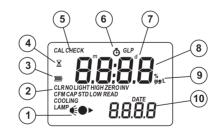

- 1. The measuring scheme (lamp, cuvette, detector), appears during different phases of zero or reading measurement
- 2. Error messages and warnings
- 3. The baterry icon shows the charging level of the batery
- 4. The hourglass appears when an internal checking is in progress
- Status messages
- 6. The chronometer appears when the reaction timer is running
- 7. The month, day and date icons appear when a date is displayed
- 8. Four digit main display
- 9. Measuring units
- 10. Four digit secondary display

#### **Errors and warnings:**

#### ON ZERO READING:



**Light High:** There is too much light to perform a measurement. Please check the preparation of the zero cuvette



**Light Low:** There is not enough light to perform a measurement. Please check the preparation of the zero cuvette.



No Light: The instrument cannot adjust the light level. Please check that the sample does not contain any debris.

#### ON SAMPLE READING:



**Inverted cuvettes:** The sample and the zero cuvette are inverted.



Zero: A zero reading was not taken. Follow the instructions of the measurement procedure for zeroing the meter.



Under range: A blinking "0" indicates that the sample absorbs less light than the zero reference. Check the procedure and make sure you use the same cuvette for reference (zero) and measurement.



Over Ranae: A flashing value of the maximum concentration indicates an over range condition. The concentration of the sample is beyond the programmed range: dilute the sample and rerun the test.

#### DURING CALIBRATION PROCEDURE



Standard Low: The standard reading is less than expected.



Standard High: The standard reading is higher than expected.

#### OTHER ERRORS AND WARNINGS:



Cap error: Appears when external light enters in the analysis cell. Assure that the cuvette cap is present.



Cooling lamp: The instrument waits for the lamp to cool down.



**Battery low:** The battery must be replaced

 


**Dead battery:** This indicates that the battery is dead and must be replaced. Once this indication is displayed, the meter will lock up. Change the battery and restart the meter.

#### Measurement procedure:

Measurement **▼** 


2







 **3•** Fill the cuvette with 10 mL of sample and replace the cap.





**5** • Press **ZERO/CFM** and the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.



 
**6** • After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for measurement.



**7**• Remove the cuvette.



8. Add the content of one packet of HI 93708-0 reagent. Replace the cap and shake aently.







10 • Press and hold READ/►/TIMER for three seconds. The display will show the countdown prior to measurement. The beeper is playing a beep at the end of countdown period.



Alternatively, wait for 10 minutes and just press READ/>/TIMER.

  In both cases the lamp cuvette and detector icons will appear on the display, depending on the measurement phase.





To convert the NO.- ion to sodium nitrite NaNO, concentration, multiply the reading by a factor of 1.5.

#### **INTERFERENCES**

HI 96708 will not recognize any alvool based samples.

#### Validation and Calibration procedures

Warning: do not validate or calibrate the instrument with standard solutions other than the Hanna CAL CHECK™ Standards, otherwise erroneous results will be obtained

For accurate validation and calibration results, please perform tests at room temperature (18 to  $25^{\circ}$ C; 64.5 to  $77.0^{\circ}$ F).

**₺** Use the Hanna CAL CHECK™ cuvettes (see

"Accessories") to validate or calibrate

Validation w

- 00 -



instruments.

1 • Turn the meter on by pressing ON/OFF.

2. When the beeper sounds briefly and the LCD displays dashes, the meter is ready.

**3•** Place the CAL CHECK<sup>™</sup> Standard HI 96708-11 Cuvette A into the holder 4-5 and ensure that the notch on the cap is positioned securely into the groove.


4. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.

**5•** After a few seconds the display will show "-0 0-" The meter is now zeroed and ready for validation.

**6** • Remove the cuvette.

**7•** Place the CAL CHECK™ Standard HI 96708-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.

8. Press CAL CHECK key and the lamp cuvette and detector icons together with "CAL CHECK" will appear on the display. depending on the measurement phase.

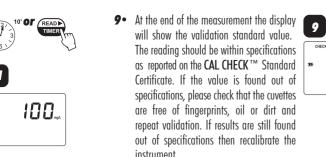

# 76.

#### **CALIBRATION**

Note: It is possible to interrupt the calibration procedure at any time by pressing CAL CHECK or ON/OFF kevs.

1 • Turn the meter on by pressing ON/OFF.

2. When the beeper sounds briefly and the 3 LCD displays dashes, the meter is ready.

3. Press and hold CAL CHECK for three seconds CAL to enter *calibration mode*. The display will show "CAL" during calibration procedure. The blinking "**7FRO**" asks for instrument zeroina.

**4•** Place the CAL CHECK™ Standard HI 96708-11 Cuvette A into the cuvette holder and ensure that the notch on the cap is positioned securely into the groove.

5. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.

**6** • After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for calibration. The blinking "READ" asks for reading calibration standard.

7• Remove the cuvette.

8• Place the CAL CHECK™ Standard HI 96708-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.

 
9 • Press READ/►/TIMER and the lamp. cuvette and detector icons will appear on 9-10 the display, depending on the measurement nhase.

**10** • The instrument will show for three seconds the CAL CHECK™ standard value.

Note: If the display shows "STD HIGH", the standard value was too high. If the display shows "STD LOW", the standard value was too low. Verify that both CAL CHECK™ Standard HI 96708-11 Cuvettes, A and B are free from fingerprints or dirt and that they are inserted cor-

**Calibration ▼** 







- 0,0 -



READ/►/TIMER.

Then the date of last calibration (e.g.:

"01.08.2008") appears on the display or

"01.01.2008" if the factory calibration was

selected before. In both cases the year

number is blinking, ready for date input.

(2000-2099). If the key is kept pressed.

the year number is automatically increased

7FRO/CFM or RFAD/►/TIMFR to confirm

Now the display will show the month blinking.

(01-12). If the key is kept pressed, the

month number is automatically increased.

ZERO/CFM or READ/►/TIMER to confirm.

(01-31). If the key is kept pressed, the day

day to year and to month by pressing

16 • Press ZERO/CFM to save the calibration

number is automatically increased.

 
Now the display will show the day blinking. 13-14

12 • When the correct year has been set, press

13 • Press GIP/▲ to edit the desired month

14 • When the correct month has been set, press

11 • Press GLP/▲ to edit the desired year





#### **GLP**

In GLP mode, the last calibration date can be consulted and the factory calibration can be restored

Last **Calibration** Date **▼** 

#### LAST CALIBRATION DATE

1 • Press GLP/▲ to enter GIP mode. The calibration month and day will appear on the main display and the year on the secondary display.

2. If no calibration was performed, the factory calibration message, "F.CAL" will appear on the main display and the instrument returns to measurement mode after three seconds.



ZERO OF READ TIMER

-20°56=

100

2008

רושם ב

GLP

#### FACTORY CALIBRATION RESTORE

factory calibration.



abort factory calibration restore.

**4** • The instrument briefly notifies "done" when restores factory calibration and returns to mensurement mode



Restore w



ZERO

donE

100....

### Warrantv

**Accessories:** 

HI 93708-01 Reagents for 100 tests

Reagents for 300 tests

9V battery (10 pcs)

Glass cuvettes (4 ncs)

Caps for cuvettes (4 pcs)

REAGENT SETS

HI 93708-03

HI 96708-11

HI 721310

HI 731318

HI 731331

HI 731335

HI 93703-50

OTHER ACCESSORIES

HI 96708 is warranted for two years against defects in workmanship and materials when used for its intended purpose and maintained according to the instructions

CAL CHECK™ Standard Cuvettes (1 set)

Cloth for wiping cuvettes (4 pcs)

Cuvette cleaning solution (230 mL).

This warranty is limited to repair or replacement free of charge.

Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered

If service is required, contact your dealer, If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred.

If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization Number from the Customer Service Department and then send it with shipment costs prepaid. When shipping any instrument, make sure it is properly packaged for complete protection.

To validate your warranty fill out and return the enclosed warranty card within 14 days from the date of purchase.

Before using these products, make sure that they are entirely suitable for your specific application and for the environment in which they are used.

Operation of these instruments may cause unacceptable interferences to other electronic equipments, this requiring the operator to take all necessary steps to correct interferences.

Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC

To avoid damages or burns, do not put the instrument in microwave oven. For yours and the instrument safety do not use or store the instrument in hazardous environments.

**Hanna Instruments** reserves the right to modify the desian, construction and appearance of its products without advance notice

> For additional information, contact your dealer or the nearest

**Hanna Customer Service Center.** To find the Hanna Office in your area. visit our web site

www.hannainst.com















FEAL

It is possible to delete the calibration and restore

 
Press GLP/▲ to enter GIP mode.

**3•** Press **ZERO/CFM** to restore the factory calibration or press GLP/A again to

# **Battery management**

To save the battery, the instrument shuts down after 10 minutes of nonuse in measurement mode and after 1 hour of non-use in calibration

If a valid measurement was displayed before auto-shut off, the value is displayed when the instrument is switched on. The blinking "ZERO"



One fresh battery lasts for arround 750 measurements, depending on the light level.

The remaining battery capacity is evaluated at the instrument startup and after each measurement.

 
The instrument displays a battery indicator with three levels as follows:

- 3 lines for 100 % capacity
- 2 lines for 66 % capacity
- 1 line for 33 % capacity
- Battery icon blinking if the capacity is under 10 %.

If the battery is empty and accurate measurements can't be taken any more, the instrument shows "dead batt" and turns off.

To restart the instrument, the battery must be replaced with a fresh one. To replace the instrument's battery, follow the steps:

- Turn the instrument off by pressing ON/OFF.
- Turn the instrument upside down and remove the battery cover by turning it counterclockwise.



• Extract the battery from its location and replace it with a fresh one.

• Insert back the battery cover and turn it clockwise to close.