INSTRUCTION MANUAL

HI 96719

Magnesium Hardness ISM



Dear Customer

Thank you for choosing a Hanna product. This manual will provide you with the necessary information for the correct use of the instrument. Please read it carefully before using the meter. If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com.

Preliminary examination:

Please examine this product carefully. Make sure that the instrument is not damaged. If any damage occured during shipment, please notify

Each HI 96719 Ion Selective Meter is supplied complete with:

- . Two Sample Cuvettes and Caps
- 9V Battery
- Instruction Manual

Note: save all packing material until you are sure that the instrument works correctly. Any defective item must be returned in its original packina.



 $|m{i}|$ For more details about spare parts and accessories see "Accessories"

Technical specifications:	
Range	0.00 to 2.00 mg/L
Resolution	0.01 mg/L
Accuracy	\pm 0.11 mg/L \pm 5% of reading @ 25°C
Typical EMC Dev.	±0.02 mg/L
Light Source	Tungsten lamp
Light Detector	Silicon Photocell with narrow band interference filter @ 525nm
Method	Adaptation of the Standard Methods for the Examination of Water and Wastewater, 18 st edition, EDTA colorimetric method. The reaction between Mg and reagents causes a violet tint in the sample.
Environment	0 to 50°C (32 to 122°F); max 95% RH non-condensing
Battery Type	1 x 9 volt
Auto-Shut off	After 10' of non-use in <i>measurement mode</i> ; after 1 hour of non-use in <i>calibration mode</i> ; with last reading reminder.
Dimensions	192 x 102 x 67 mm (7.6 x 4 x 2.6")
Weight	290 g (10 oz.).

Functional description:



- 1. GLP/A key: press to enter GLP mode. In calibration mode press to edit the date and time
- 2. CAL CHECK key: press to perform the validation of the meter, or press and hold for three seconds to enter calibration mode.
- 3. ZERO/CFM kev: press to zero the meter prior to measurement, to confirm edited values or to confirm factory calibration restore.
- 4. READ/►/TIMER key: In measurement mode, press to make a measurement, or press and hold for three seconds to start a preprogrammed countdown prior to measurement. In GLP mode press to view the next screen.
- 5. ON/OFF key: to turn the meter on and off.
- 6. Liquid Crystal Display (LCD)
- 7. Cuvette alignment indicator
- 8 Cuvette holder

DISPLAY ELEMENTS DESCRIPTION:



- 1. The measuring scheme (lamp, cuvette, detector), appears during different phases of zero or reading measurement
- 2 Frror messages and warnings
- 3. The baterry icon shows the charging level of the batery
- 4. The hourglass appears when an internal checking is in progress
- 5. Status messages
- 6. The chronometer appears when the reaction timer is running
- 7. The month, day and date icons appear when a date is displayed
- 8. Four digit main display
- 9. Measuring units
- 10. Four digit secondary display

Errors and warnings:

ON ZERO READING:



Light High: There is too much light to perform a measurement. Please check the preparation of the zero cuvette.



Light Low: There is not enough light to perform a measurement. Please check the preparation of the zero cuvette.



No Light: The instrument cannot adjust the light level. Please check that the sample does not contain any debris.

ON SAMPLE READING:



Inverted cuvettes: The sample and the zero cuvette are inverted.



Zero: A zero reading was not taken. Follow the instructions of the measurement procedure for zeroing the meter.



Under range: A blinking "0.00" indicates that the sample absorbs less light than the zero reference. Check the procedure and make sure you use the same cuvette for reference (zero) and measurement.



Over Range: A flashing value of the maximum concentration indicates an over range condition. The concentration of the sample is beyond the programmed range: dilute the sample and rerun the test

DURING CALIBRATION PROCEDURE



Standard Low: The standard reading is less than expected.



Standard High: The standard reading is higher than expected.

OTHER ERRORS AND WARNINGS:



Cap error: Appears when external light enters in the analysis cell. Assure that the cuvette cap is present



Cooling lamp: The instrument waits for the lamp to cool down.



Battery low: The battery must be replaced



Dead battery: This indicates that the battery is dead and must be replaced. Once this indication is displayed, the meter will lock up. Change the battery and restart the meter.

Measurement procedure:

Measurement w



1 • Turn the meter on by pressing ON/OFF. 2. When the beeper sounds briefly and the



LCD displays dashes, the meter is ready. The blinking "ZERO" indicates that the instrument needs to be zeroed first



3. Fill a graduated beaker with 50 mL of 4 • Add 0.5 mL of HI 93719A-0 Mg indicator



5. In the same beaker add 0.5 mL of HI 93719B-O Alkali solution for Ma, then

 
solution then swirl to mix

swirl to mix



6. Fill two cuvettes with 10 mL of sample

the solution. This is the blank.



8 • Add 1 drop of HI 93719D-0 EGTA solution to the second cuvette, replace the cap and swirl the solution. This is the sample.

to one cuvette, replace the cap and swirl



. -00-

 
00,54

 
12

10 • Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display, depending on the measurement

securely into the groove.

that the notch on the cap is positioned





13 • Press and hold READ/►/TIMER for three seconds. The display will show the countdown prior to measurement. The beeper is playing a beep at the end of countdown period.

> Alternatively, wait for 30 seconds then iust press READ/►/TIMER.

> In both cases, the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.

14 • The instrument directly displays concentration in ma/L (ppm) of magnesium hardness. as CaCO₂, on the Liquid Crystal Display To convert the result to ma/L Ma. multiply the reading by 0.243.

Note: the test will detect any calcium or magnesium contamination in the mixing cylinders, measuring droppers or sample cells. To test cleanliness. repeat the test multiple times until you obtain consistent results.

SAMPLE DILUTION

035

This meter is designed to determine low levels of hardness, typically found in water purification systems.

When testing some other sources of water, it is not uncommon to come across levels of hardness that are greater than the range of this meter.

This problem can be overcome through dilution. Dilutions must be performed with hardness-free water or the readings will be erroneus.

A dilution to reduce the level of hardness by a factor of one hundred is performed as follows:

- . Fill a 1 mL syringe with the sample.
- Place the syringe in a 50 mL beaker, making sure that the beaker is clean and empty, and inject 0.5 mL into the beaker.
- · Fill the beaker up to the 50 mL mark with hardness-free water.



Now, follow normal measurement procedure. The true value of sample is the reading obtained multiplied by a factor of one hundred (the dilution

For your reference, factors to convert readings in ma/L to French degrees (FD). German degrees (DD) and English degrees (ED) of hardness are as follows:

1 mg/L = 0.1 FD = 0.056 DD = 0.07 ED

 
INTERFERENCES

Interference may be caused by excessive amounts of heavy metals.

Validation and Calibration procedures

Warnina: do not validate or calibrate the instrument with standard solutions other than the Hanna CAL CHECK™ Standards, otherwise erroneous results will be obtained

For accurate validation and calibration results, please perform tests at room temperature (18 to 25°C: 64.5 to 77.0°F).



VALIDATION

Validation **▼**

€0+

-

10 1.

-00-

- 1 Turn the meter on by pressing ON/OFF.
- 2. When the beeper sounds briefly and the LCD displays dashes, the meter is ready.
- 3. Place the CAL CHECK™ Standard HI 96719-11 Cuvette A into the holder and ensure that the notch on the cap is positioned securely into the groove.
- 4. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display, depending on the measurement phase.
- 5. After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for validation.
- 6. Remove the cuvette.
- 7. Place the CAL CHECK™ Standard HI 96719-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.
- 8. Press CAL CHECK key and the lamp. cuvette and detector icons together with "CAL CHECK" will appear on the display, depending on the measurement phase.
- 9. At the end of the measurement the display will show the validation standard value. The reading should be within specifications as reported on the CAL CHECK™ Standard

Certificate If the value is found out of specifications, please check that the cuvettes are free of fingerprints, oil or dirt and repeat validation. If results are still found out of specifications then recalibrate the instrument

CALIBRATION

Note: It is possible to interrupt the calibration procedure at any time by pressing CAL CHECK or ON/OFF keys

- 1 Turn the meter on by pressing ON/OFF.
- 2. When the beener sounds briefly and the LCD displays dashes, the meter is ready.
- 3. Press and hold CAL CHECK for three seconds to enter calibration mode. The display will show "CAL" during calibration procedure. The blinking "ZERO" asks for instrument zeroing.
- **4** Place the CAL CHECK™ Standard HI 96719-11 Cuvette A into the cuvette holder and ensure that the notch on the cap is positioned securely into the groove.
- 5. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the 5-6 display, depending on the measurement phase.
- 6. After a few seconds the display will show "-0 0-" The meter is now zeroed and ready for calibration. The blinking "READ" asks for reading calibration standard.
- 7. Remove the cuvette
- 8 Place the CAL CHECK™ Standard HI 96719-11 Cuvette R into the holder and ensure that the notch on the cap is positioned securely into the groove.
- 9. Press READ/►/TIMER and the lamp. cuvette and detector icons will appear on the 9-10 display, depending on the measurement phase.
- 10 After measurment the instrument will show for three seconds the CAL CHECK™ standard value

Note: If the display shows "STD HIGH", the standard value was too high. If the display shows "STD LOW", the standard value was too low. Verify that both CAL CHECK™ Standard HI 96719-11 Cuvettes, A and B are free from fingerprints or dirt and that they are inserted correctly.

"01 08 2008") annears on the display or "01.01.2008" if the factory calibration was selected before. In both cases the year number is blinking, ready for date input

Then the date of last calibration (e.g.:

- 11 Press GLP/▲ to edit the desired year (2000-2099). If the key is kept pressed. the year number is automatically increased.
- 12 When the correct year has been set, press ZERO/CFM or READ/►/TIMER to confirm. Now the display will show the month blinkina.
- 13 Press GLP/▲ to edit the desired month (01-12). If the key is kept pressed, the month number is automatically increased.
- 14. When the correct month has been set. nress 7FRO/CFM or RFAD/>/TIMFR to confirm. Now the display will show the day blinking.
- 15 Press GLP/▲ to edit the desired day (01-31). If the key is kept pressed, the day number is automatically increased.
- Note: It is possible to change the editing from day to year and to month by pressing READ/►/TIMER.
- 16 Press ZERO/CFM to save the calibration date.
- 17. The instrument displays "Stor" for one second and the calibration is saved.
- 18 The instrument will return automatically to measurement mode by displaying dashes on the LCD.















GLP

In GLP mode, the last calibration date can be consulted and the factory calibration can be restored

Calibration Date ▼

LAST CALIBRATION DATE

- 1 Press GLP/▲ to enter GLP mode. The calibration month and day will appear on the main display and the year on the secondary display.
- 2. If no calibration was performed, the factory calibration message, "F.CAL" will appear on the main display and the instrument returns to measurement mode after three seconds.





FACTORY CALIBRATION RESTORE

It is possible to delete the calibration and restore factory calibration.

- 1 Press GIP/▲ to enter GIP mode.
- 2. Press READ/>/TIMER to enter in the factory calibration restore screen. The instrument asks for confirmation of user calibration delete
- 3. Press ZERO/CFM to restore the factory calibration or press GLP/A again to abort factory calibration restore.
- 4. The instrument briefly notifies "done" returns to measurement mode.

Factory Calibration Restore **▼**







when restores factory calibration and





0.35.

Battery management

To save the battery, the instrument shuts down after 10 minutes of nonuse in measurement mode and after 1 hour of non-use in calibration

If a valid measurement was displayed before auto-shut off, the value is displayed when the instrument is switched on. The blinking "ZERO" means that a new zero has to be performed.

One fresh battery lasts for arround 750 measurements, depending on the light level

The remaining battery capacity is evaluated at the instrument startup and after each measurement.

The instrument displays a battery indicator with three levels as follows:

- 3 lines for 100 % capacity
- 2 lines for 66 % capacity
- 1 line for 33 % capacity
- Battery icon blinking if the capacity is under 10 %.

If the battery is empty and accurate measurements can't be taken any more, the instrument shows "dead batt" and turns off.

To restart the instrument, the battery must be replaced with a fresh one. To replace the instrument's battery, follow the steps:

- . Turn the instrument off by pressing ON/OFF.
- Turn the instrument upside down and remove the battery cover by turning it counterclockwise.



- Extract the battery from its location and replace it with a fresh one.
- · Insert back the battery cover and turn it clockwise to close.

Accessories:

REAGENT SETS

HI 93719-01 Reagents for 100 tests HI 93719-03 Reagents for 300 tests

OTHER ACCESSORIES

CAL CHECK™ Standard Cuvettes (1 set) HI 96719-11

HI 721310 9V battery (10 pcs)

HI 731318 Cloth for wiping cuvettes (4 pcs)

HI 731331 Glass cuvettes (4 pcs) HI 731335 Caps for cuvettes (4 pcs)

HI 93703-50 Cuvette cleaning solution (230 mL).

Warrantv

HI 96719 is warranted for two years against defects in workmanship and materials when used for its intended purpose and maintained according to the instructions.

This warranty is limited to repair or replacement free of charge.

Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered

If service is required, contact your dealer. If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred.

If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization Number from the Customer Service Department and then send it with shipment costs prepaid. When shipping any instrument, make sure it is properly packaged for complete protection.

To validate your warranty, fill out and return the enclosed warranty card within 14 days from the date of purchase.

safety do not use or store the instrument in hazardous environments

Before using these products, make sure that they are entirely suitable for your specific application and for the environment in which they are used

Oneration of these instruments may cause unacceptable interferences to other electronic equipments, this requiring the operator to take all peressary steps to correct interferences. Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC

To avoid damages or burns, do not out the instrument in microwave over. For yours and the instrument

Hanna Instruments reserves the right to modify the design, construction and appearance of its products without advance notice.

For additional information, contact your dealer or the nearest

Hanna Customer Service Center. To find the Hanna Office in your area, visit our web site

www.hannainst.com



100.

Calibration **▼**

- 0.0 -