INSTRUCTION MANUAL

HI 96730

Molybdenum ISM

Thank you for choosing a Hanna Instruments product.

Please read this instruction manual carefully before using these instruments. This manual will provide you with the necessary information for correct use of these instruments, as well as a precise idea of their versatility. If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com or view our worldwide contact list nt www hannainst com

Preliminary examination:

Please examine this product carefully. Make sure that the instrument is not damaged. If any damage occured during shipment, please notify vour Dealer

Each **HI 96730** Ion Selective Meter is supplied complete with:

- Two Sample Cuvettes and Caps
- 9V Battery
- Instruction Manual


Note: Save all packing material until you are sure that the instrument works correctly. Any defective item must be returned in its original



 $|m{i}|$ For more details about spare parts and accessories see "Accessories".

Technical specifications:	
Range	0.0 to 40.0 mg/L
Resolution	0.1 mg/L
Accuracy	± 0.3 mg/L $\pm 5\%$ of reading @ 25°C
Typical EMC Dev.	±0.1 mg/L
Light Source	Tungsten Lamp
Light Detector	Silicon Photocell with narrow band interference filter @ 420 nm
Method	Adaptation of the mercaptoacetic acid method. The reaction between molybdenum and the reagents causes a yellow tint in the sample.
Environment	0 to 50°C (32 to 122°F); max 95% RH non-condensing
Battery Type	1 x 9 volt
Auto-Shut off	After 10' of non-use in measurement mode; after 1 hour of non-use in calibration mode; with last reading reminder.
Dimensions	192 x 104 x 69 mm (7.6 x 4.1 x 2.7 ")
Weight	360 g (12.7 oz.)

Functional description:

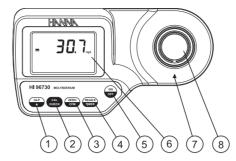

- 1. GLP/A kev: press to enter GLP mode. In calibration mode press to edit the date and time
- 2. CAL CHECK key: press to perform the validation of the meter, or press and hold for three seconds to enter calibration mode.
- 3. **ZERO/CFM** key: press to zero the meter prior to measurement, to confirm edited values or to confirm factory calibration restore.
- 4. READ/▶/TIMER kev: In measurement mode, press to make a measurement, or press and hold for three seconds to start a pre-programmed countdown prior to measurement. In GLP mode press to view the next screen.
- 5. **ON/OFF** kev: to turn the meter on and off.
- 6. Liquid Crystal Display (LCD)
- 7. Cuvette alianment indicator
- 8 Cuvette holder

DISPLAY ELEMENTS DESCRIPTION:



- 1. The measuring scheme (lamp, cuvette, detector), appears during different phases of zero or reading measurement
- 2. Error messages and warnings
- 3. The battery icon indicates the charge state of the battery
- 4. The hourglass appears when an internal check is in progress
- Status messages
- 6. The chronometer appears when the reaction timer is running
- 7. The month, day and date icons appear when a date is displayed
- 8. Four digit main display
- 9. Measuring units
- 10. Four digit secondary display

Errors and warnings:

ON ZERO READING:



Light High: There is too much light to perform a measurement. Please check the preparation of the zero cuvette.



Light Low: There is not enough light to perform a measurement. Please check the preparation of the zero cuvette



No Light: The instrument cannot adjust the light level. Please check that the sample does not contain any debris.

ON SAMPLE READING:



Inverted cuvettes: The sample and the zero cuvette are inverted.



Zero: A zero reading was not taken. Follow the instructions of the measurement procedure for zeroina the meter.



Under range: A blinking "0.00" indicates that the sample absorbs less light than the zero reference. Check the procedure and make sure you use the same cuvette for reference (zero) and measurement.



Over Range: A flashing value of the maximum concentration indicates an over range condition. The concentration of the sample is beyond the programmed range: dilute the sample and re-run the test

DURING CALIBRATION PROCEDURE



Standard Low: The standard reading is less than expected.



Standard High: The standard reading is higher than expected.

OTHER ERRORS AND WARNINGS:



Cap error: Appears when external light enters in the analysis cell. Assure that the cuvette cap is present.



Cooling lamp: The instrument waits for the lamp to cool down.



Battery low: The battery must be replaced soon.



Dead battery: This indicates that the battery is dead and must be replaced. Once this indication is displayed, normal operation of the instrument will be interrupted. Change the battery and restart the meter.

1 • Turn the meter on by pressing **ON**/

2. When the beeper sounds briefly and

3. Fill the cuvette with 10 ml of

5 • Press **ZERO/CFM** and the lamp, cuvette

6 • After a few seconds the display will

and detector icons will appear on the

display, depending on the measurement

the LCD displays dashes, the meter is

 
ready. The blinking "ZERO" indicates

that the instrument needs to be zeroed

Measurement procedure:

Measurement **▼** 2 ZERO










12

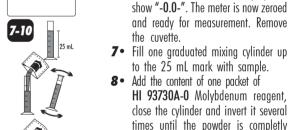

- dissolved. **9** • Add the content of one packet of HI 93730B-0 Reagent B to the cylinder, close it and invert several times until the powder is completely dissolved.
- 10 Add the content of one packet of HI 93730C-O Reagent C to the cylinder, close and shake it viaorously.
- 11 Fill a cuvette with 10 mL of the reacted sample up to the 10 mL mark and replace the cap.
- 12 Place the cuvette into the cuvette holder and ensure that the notch on the cap is positioned securely into the



- 13 Press and hold READ/►/TIMER for three countdown prior to measurement or alternatively wait for 5 minutes and press READ/►/TIMER. An audible "beep" indicates the end of countdown period. In all cases the lamp, cuvette and detector icons will appear on the display, depending on the measurement phase
- 14 At the end of measurement, the instrument directly displays concentration in ma/L of molybdenum on the ICD

INTERFERENCES:

Interference may be caused by: Aluminum above 50 ma/l Chromium above 1000 mg/L Copper above 10 ma/L Iron above 50 ma/l Nickel above 50 ma/L Nitrite as NO₂ Sulfate above 200 ma/l

Highly buffered samples or with extreme pH may exceed the buffering capacity of the reagents.

ۥ>

308.

Validation w

III) ZERO

- [][] -

6

8

ۥ>

€●►

14

Validation and Calibration procedures


Warning: do not validate or calibrate the instrument with standard solutions other than the Hanna (A) CHECK™ Standards otherwise erroneous results will be obtained

For accurate validation and calibration results, please perform tests at room temperature (18 to 25°C; 64.5 to 77.0°F).

i Use the Hanna CAL CHECK™ cuvettes (see "Accessories") to validate or calibrate instruments.

VALIDATION

- 1 Turn the meter on by pressing ON/OFF. 3
- 2. When the beeper sounds briefly and the LCD displays dashes, the meter is ready.
- **3•** Place the CAL CHECK™ Standard HI 96730-11 Cuvette A into the holder and ensure that the notch on the cap is positioned securely into the groove.
- 4. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.
- **5** After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for validation.
- 6. Remove the cuvette.
- **7** Place the **CAL CHECK**™ Standard HI 96730-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.
- 8. Press CAL CHECK key and the lamp. cuvette and detector icons together with "CAL CHECK" will appear on the display. depending on the measurement phase.

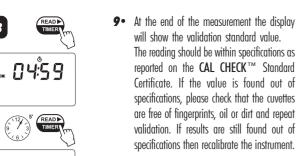


CALIBRATION

Note: It is possible to interrupt the calibration procedure at any time by pressing CAL CHECK or ON/OFF kevs.

- 1 Turn the meter on by pressing ON/OFF.
- 2. When the beeper sounds briefly and the LCD displays dashes, the meter is ready.
- 3. Press and hold CAL CHECK for three seconds. to enter calibration mode. The display will show "CAL" during calibration procedure. The blinkina "ZERO" asks for instrument zeroing.
- **4** Place the CAL CHECK™ Standard **4** HI 96730-11 Cuvette A into the cuvette holder and ensure that the notch on the cap is positioned securely into the groove.
- 5. Press ZERO/CFM and the lamp, cuvette 5-6 and detector icons will appear on the display. depending on the measurement phase.
- **6** After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for calibration. The blinking "READ" asks for reading calibration standard.
- 7• Remove the cuvette.
- 8 Place the CAL CHECK™ Standard HI 96730-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.
- **9** Press **READ/**►/**TIMER** and the lamp. cuvette and detector icons will appear on the display, depending on the measurement phase.
- 10 The instrument will show for three seconds the CAL CHECK™ standard value.

 Note: If the display shows "STD HIGH", the standard value was too high. If the display shows "STD LOW", the standard value was too low. Verify that both CAL CHECK™ Standard HI 96730-11 Cuvettes, A and B are free from fingerprints or dirt and that they are inserted correctly.



Calibration ▼

ZERO

ۥ>

- 0.0 -

100.

- 12 Press GLP/▲ to edit the desired vegr (2009-2099). If the key is kept pressed. the year number is automatically increased.
- 13 When the correct year has been set, press ZERO/CFM or READ/►/TIMER to confirm. Now the display will show the month blinking.
- 14 Press GLP/▲ to edit the desired month (01-12). If the key is kept pressed, the month number is automatically increased
- 15 When the correct month has been set. press ZERO/CFM or READ/>/TIMER to confirm. Now the display will show the dav blinkina.
- **16** Press GLP/▲ to edit the desired day (01-31). If the key is kept pressed, the day number is automatically increased.
- Note: It is possible to change the editing from day to year and to month by pressing READ/►/TIMER.
- 17 Press ZERO/CFM to save the calibration
- 18 The instrument displays "Stor" for one second and the calibration is saved.
- 19 The instrument will return automatically to *measurement mode* by displaying dashes on the LCD.

GLP

In GLP mode, the last calibration date can be verified and the factory calibration can be restored

LAST CALIBRATION DATE

- 1 Press GLP/▲ to enter GIP mode. The calibration month and day will appear on the main display and the year on the secondary display.
- 2. If no calibration was performed, the factory calibration message. "F.CAL" will appear on the main display and the instrument returns to measurement mode after three seconds.

Last **Calibration** Date w

0 108

GLP

ZERO OF READ TIMER

0 108

ZERO OF READ TIMER

20009

GLP

0906

2009

GLP

ZERO CFM

Stor

17

2005<u></u>





FACTORY CALIBRATION RESTORE

It is possible to delete the calibration and restore factory calibration.





- **3** Press **7ERO/CFM** to restore the factory calibration or press GLP/A again to abort factory calibration restore.
- upon restoration of factory calibration prior returning to measurement mode.

Factory Calibration Restore w





4. The instrument briefly indicates "donE"

To save the battery, the instrument shuts down after 10 minutes of non-use in measurement mode and after 1 hour of non-use in calibration mode.

If a valid measurement was displayed before auto-shut off the value is displayed when the instrument is switched on. The blinking "ZERO"



One fresh battery lasts for arround 750 measurements, depending on the light level

The remaining battery capacity is evaluated at the instrument startup and after each measurement

- 3 lines for 100 % capacity

- Battery icon blinking if the capacity is under 10 %.

more the instrument shows "dFAd bAtt" and turns off.

To replace the instrument's battery, follow the steps:

- turning it counterclockwise.



- Extract the battery from its location and replace it with a fresh one.
- Insert back the battery cover and turn it clockwise to close.

Accessories:

REAGENT SETS

HI 93730-01 Reagents for 100 tests Reagents for 300 tests HI 93730-03

OTHER ACCESSORIES

CAL CHECK™ Standard Cuvettes (1 set) HI 96730-11

HI 721310 9V battery (10 pcs)

HI 731318 Cloth for wiping cuvettes (4 pcs) HI 731331 Glass cuvettes (4 pcs)

HI 731335 Caps for cuvettes (4 pcs)

HI 93703-50 Cuvette cleaning solution (230 mL)

Warrantv

HI 96730 is warranted for two years against defects in workmanship and materials when used for its intended purpose and maintained according to the instructions

This warranty is limited to repair or replacement free of charge.

Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered

If service is required, contact your dealer, If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred.

If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization Number from the Customer Service Department and then send it with shipment costs prepaid. When shipping any instrument, make sure it is properly packaged for complete protection.

To validate your warranty fill out and return the enclosed warranty card within 14 days from the date of purchase.

][

Before using these products, make sure that they are entirely suitable for your specific application and for the environment in which they are used. Operation of these instruments may cause unacceptable interferences to other electronic equipment, this

requiring the operator to take all necessary steps to correct interferences. Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC

To avoid damages or burns, do not put the instrument in microwave oven. For yours and the instrument

safety do not use or store the instrument in hazardous environments.

 
Hanna Instruments reserves the right to modify the design, construction or appearance of its products without advance notice.

> For additional information, contact your dealer or the nearest

Hanna Customer Service Center. To find the Hanna Office in your area. visit our web site

www.hannainst.com













Battery management

means that a new zero has to be performed.



The instrument displays a battery indicator with three levels as follows:

- 2 lines for 66 % capacity
- 1 line for 33 % capacity
- If the battery is empty and accurate measurements can't be taken any

To restart the instrument, the battery must be replaced with a fresh one.

- Turn the instrument off by pressing **ON/OFF**.
- Turn the instrument upside down and remove the battery cover by

